

audio research
HIGH DEFINITION®



Reference 75 SE

Thank you for choosing the Reference 75 SE to be a part of your high performance music listening system. Since 1970, Audio Research has been creating some of the world's finest audio equipment. Each piece is handcrafted in Minnesota, and has been designed to provide many years of listening enjoyment.

We understand you are eager to begin listening; however, please take a few minutes to read through this guide for useful information concerning the operation of your new amplifier. Once installed, please allow an appropriate break-in period to fully appreciate the benefits this amplifier will provide to your system.

After reading the user guide, if you have any further questions regarding your amplifier, contact your dealer or Audio Research customer service - they will be happy to help you make the most of your new component.

Happy Listening!

Thank You.

Contents

Warnings	5	Maintenance	15
		Vacuum Tubes	15
Installation	6	Service.....	15
Before Operating the Reference 75 SE	6	Cleaning.....	15
In your system	7	Disposal and Recycling Guidelines.....	16
A Note about Vacuum Tubes.....	7	Fuse Values and Locations.....	16
Connections	8		
Back Panel Controls and Connections.....	8	Warranty	17
Input Connectors	9		
Output Connectors.....	9	Specifications	18
Matching.....	9		
Remote Turn-on	10		
A.C. Power Connection	11		
Operation	12		
Front Panel Controls and Displays.....	12		
Start-Up.....	13		
Shut-Down	13		
Break-in.....	13		
Display Brightness Adjustment	13		
Output Tube Bias Adjus	14		

Warnings

To prevent fire, or shock hazard, do not expose your Reference 75 SE to rain or moisture.

Do not place objects containing water on top of this unit.

This unit contains voltages which can cause serious injury or death. Do not operate with covers removed. Refer servicing to your authorized Audio Research dealer or other qualified personnel.

The detachable power cord on your Reference 75 SE is equipped with a heavy gauge, 3-conductor cable and a standard three-prong grounding plug. For absolute protection, do not defeat the ground power plug. This provides power line grounding of the Reference 75 SE chassis to provide absolute protection from electrical shock.

The appliance coupler (a.c. power connector) at the rear of this unit must be accessible for emergency power disconnect.


For continued protection against fire hazard, replace the fuse only with the same type and rating as specified at the fuse holder.

This unit is RoHS compliant.

A note about packaging...

Save all packaging in a dry place away from fire hazard. Your Reference 75 SE amplifier is a precision electronic instrument and should be properly cartoned any time shipment is made. You may not have occasion to return your unit to the factory for service, but if that should prove necessary, or other occasion requiring shipment occurs, the original packaging will protect your Reference 75 SE from unnecessary damage or delay.

Installation

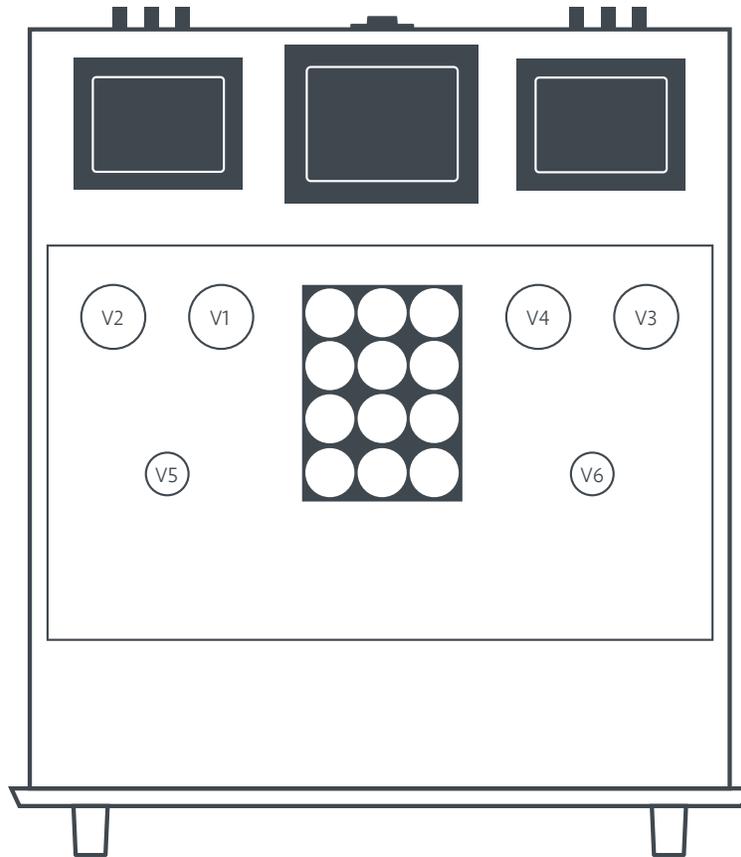

Before operating the Reference 75 SE

Your Reference 75 SE amplifier is shipped with the vacuum tubes packed in foam blocks. These must be unpacked and installed before you attempt to operate the amplifier. Included are two matched pair of KT150 output tubes, and two 6H30 dual triodes used in the input stage. Proceed according to the following instructions.

Remove all screws fastening the top cover. Carefully remove each vacuum tube from its protective foam and match its location 'V' number (written on the base of the tube) to the 'V' number printed next to each socket. Firmly seat each tube in its matching socket, taking care to 'key' the tube pins to the socket holes. Retain the foam blocks with other packing materials for possible future use.

Refasten top cover on amplifier.

Installation

In your system

To insure normal component life and safe operation this unit must be operated only in an upright position. Adequate airflow and proper cooling can occur only if there is no restriction above and behind the unit and on either side.

The special non-marring elastomer feet provide adequate spacing and stability only on a smooth, hard surface, and also assist to isolate the amplifier from spurious vibrations. For upright stability and best performance, never operate the unit while it is sitting on a soft surface such as a thick rug or carpet.

Due to its weight, this amplifier must be supported on a surface specifically rated for such a load. Check with the manufacturer of your support system to be sure it is rated to handle this weight.

If the unit is to be operated in an enclosure such as an equipment rack, make certain that adequate airflow above and to each side of the unit is provided.

The 'ambient' operating temperature should never exceed 120° F or 49° C. Improper installation will cause premature tube failure and will affect your warranty, as well as the service life of the unit.


It is normal for a vacuum tube power amplifier to run quite warm, and if used for prolonged periods, hot to the touch. All components within are, however, operated at safe, conservative levels and will not be improperly affected thereby, providing the requirements outlined above are adhered to.

A Note about Vacuum Tubes

The vacuum tubes in your Reference 75 SE have been burned in, tested and electrically matched to provide the best performance and reliability of your amplifier. That said, vacuum tubes must be replaced from time to time. The KT150 output tubes in the Reference 75 SE should have an expected life of approximately 2,000 hours, while the smaller 6H30 tubes should have a life expectancy of approximately 4,000 hours. These life expectancies are only approximate.

Connections

Back Panel Controls and Connections

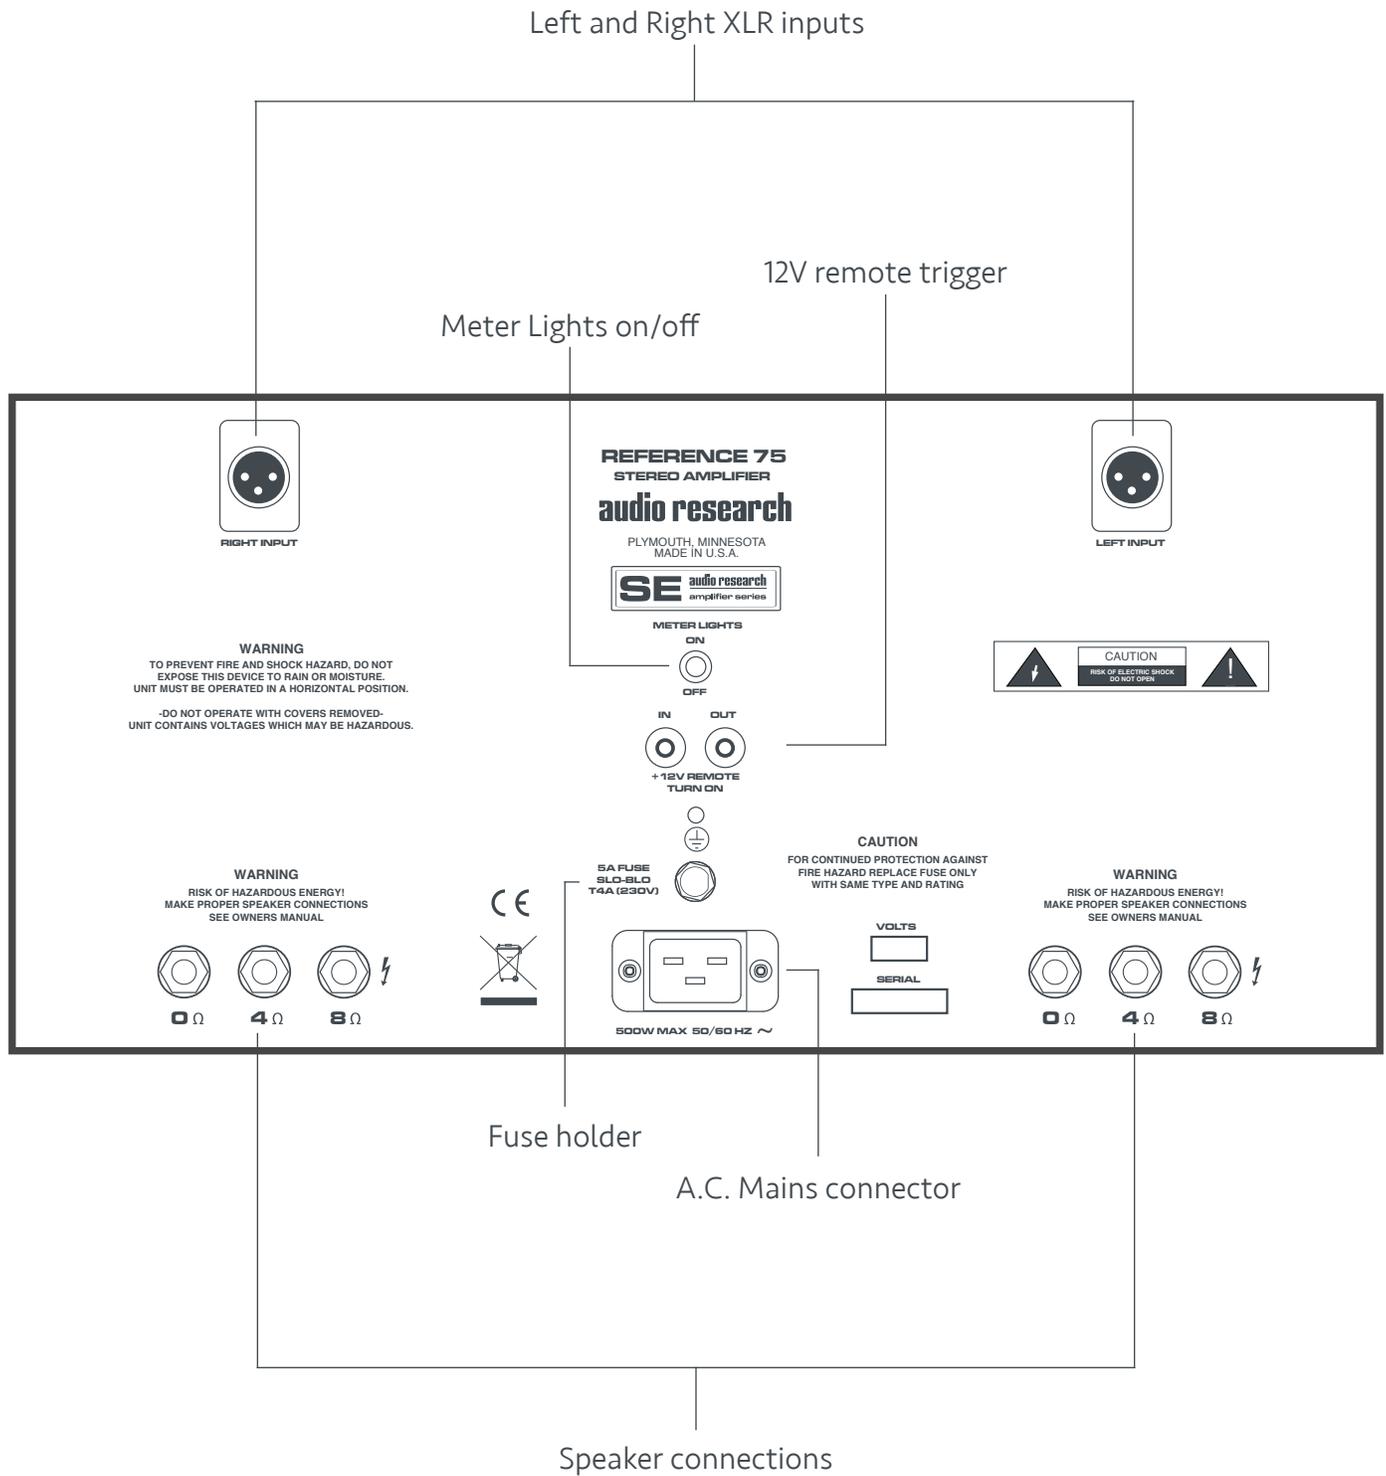

Connections

Input Connectors

The Reference 75 SE uses a fully balanced circuit topology and has a pair of balanced XLR input connectors on the rear panel. It therefore requires a balanced preamplifier output, as provided by most Audio Research preamplifiers. Connect your preamplifier's output to the Reference 75 SE before turning on the amplifier.

Output Connectors

Heavy-duty output terminals are provided on the rear panel for 4 or 8-ohm speaker impedance loads. Using high-quality speaker cables, securely fasten the (-) speaker lead to the appropriate (black) terminal, then the (+) lead to the matching (red) terminal. Follow your speaker manufacturer's impedance specification.

The Reference 75 SE puts out the same amount of power whether the 4 or 8-ohm terminals are used.

Matching

It is important to use as close as possible an impedance match between the amplifier and speaker for optimum transfer of power to the speaker with minimum distortion. In the case of speaker systems with significant variations in impedance throughout the frequency spectrum, such as most electrostatic types, determine the best impedance match empirically for best overall sonic results.

Connect the Reference 75 SE input to the preamplifier or electronic crossover, using only the highest grade of audio interconnect cables. To avoid sonic degradation use the shortest practical length of cables.

Important

Use the best available speaker wires and interconnects. Audio Research cannot emphasize this enough. As better components and systems are developed, it becomes increasingly important to avoid the limitations of inferior system interconnections.

It is important sonically that your entire system be connected so that the audio signal arriving at the speakers has correct, or 'absolute' polarity (i.e., non-inverted). Connect the black or '-' speaker terminal to the wire that connects to the '0' terminal on the Reference 75 SE. Connect the red or '+' speaker terminal to the wire that connects to the '4' or '8' terminal on the Reference 75 SE and tighten the speaker terminals securely to ensure best sonic results.

Connections

Remote Turn-on

The Reference 75 SE has a built-in 12V DC remote turn-on/off circuit for operation by a master control system in a home theater or large audio system. Use a 3.5mm (.140") diameter mono mini plug to connect to the +12V IN jack on the rear of the Reference 75 SE.

The +12V IN jack should be connected to the +12V DC output of the master control system, using a continuous +12V DC signal at 12mA per Reference 75 SE for the duration of amplifier on-time. Do not use a momentary or data pulse control signal.

The +12V DC remote jacks have polarity protection, so they will not operate if a -12V DC signal is accidentally connected, or if the control wires are reversed.

When the 12V DC remote turn-on/off circuit is used, the power switch on the front panel should be turned off.

Connections

A.C. Power Connection

It is important that the Reference 75 SE be connected via its supplied 20 amp IEC 12-gauge power cord to a secure, dedicated A.C. power receptacle. Never connect to convenience power receptacles on other equipment. Only use the power switch on the front of the Reference 75 SE for On/Off control of the amplifier, or the 12V start-up trigger for remote installations.

The AC power source for the Reference 75 SE amplifier should be capable of supplying 10 amperes for 100 or 120 volt units, or 5 amperes for 220 or 240 volt units.

For the very best performance on 100 or 120 volt circuits, the Reference 75 SE should be connected to its own AC power circuit branch, protected by a 15 amp breaker. The preamplifier and other audio equipment should be connected to a different power circuit and breaker.


The Reference 75 SE should be turned on after the other components of your system. If the Reference 75 SE is turned on before other components, the amplifier will amplify any extraneous turn-on noises those components might generate, which could potentially damage the loudspeakers. Good operating practice dictates that the amplifier should be turned on last, and turned off first in an audio system.

The Reference 75 SE uses a grounding system that does not require a ground-lifter adapter plug on the A.C. power cord to minimize hum. The power cord supplied with the Reference 75 SE has a standard grounding plug to provide maximum safety when properly connected to a grounded wall receptacle. If there is any question regarding proper grounding procedures in your installation, seek help from a qualified technician. Caution should be taken before using custom after-market power cords: they must be at least 12-gauge and have a standard grounding plug properly installed. These power cords are to be used with caution, at the sole risk of the owner.

If electronic crossovers or other AC powered equipment is used with the Reference 75 SE it may be necessary to use 'ground lifter' adapters on the power plugs of that equipment to minimize system hum. Generally, the lowest hum is achieved when the only direct connection between audio common 'ground' and true earth ground occurs in the preamplifier, through its grounded power cord. Other equipment in the system should have some form of isolation to prevent ground loops and associated hum.

Operation

Front Panel Controls and Displays

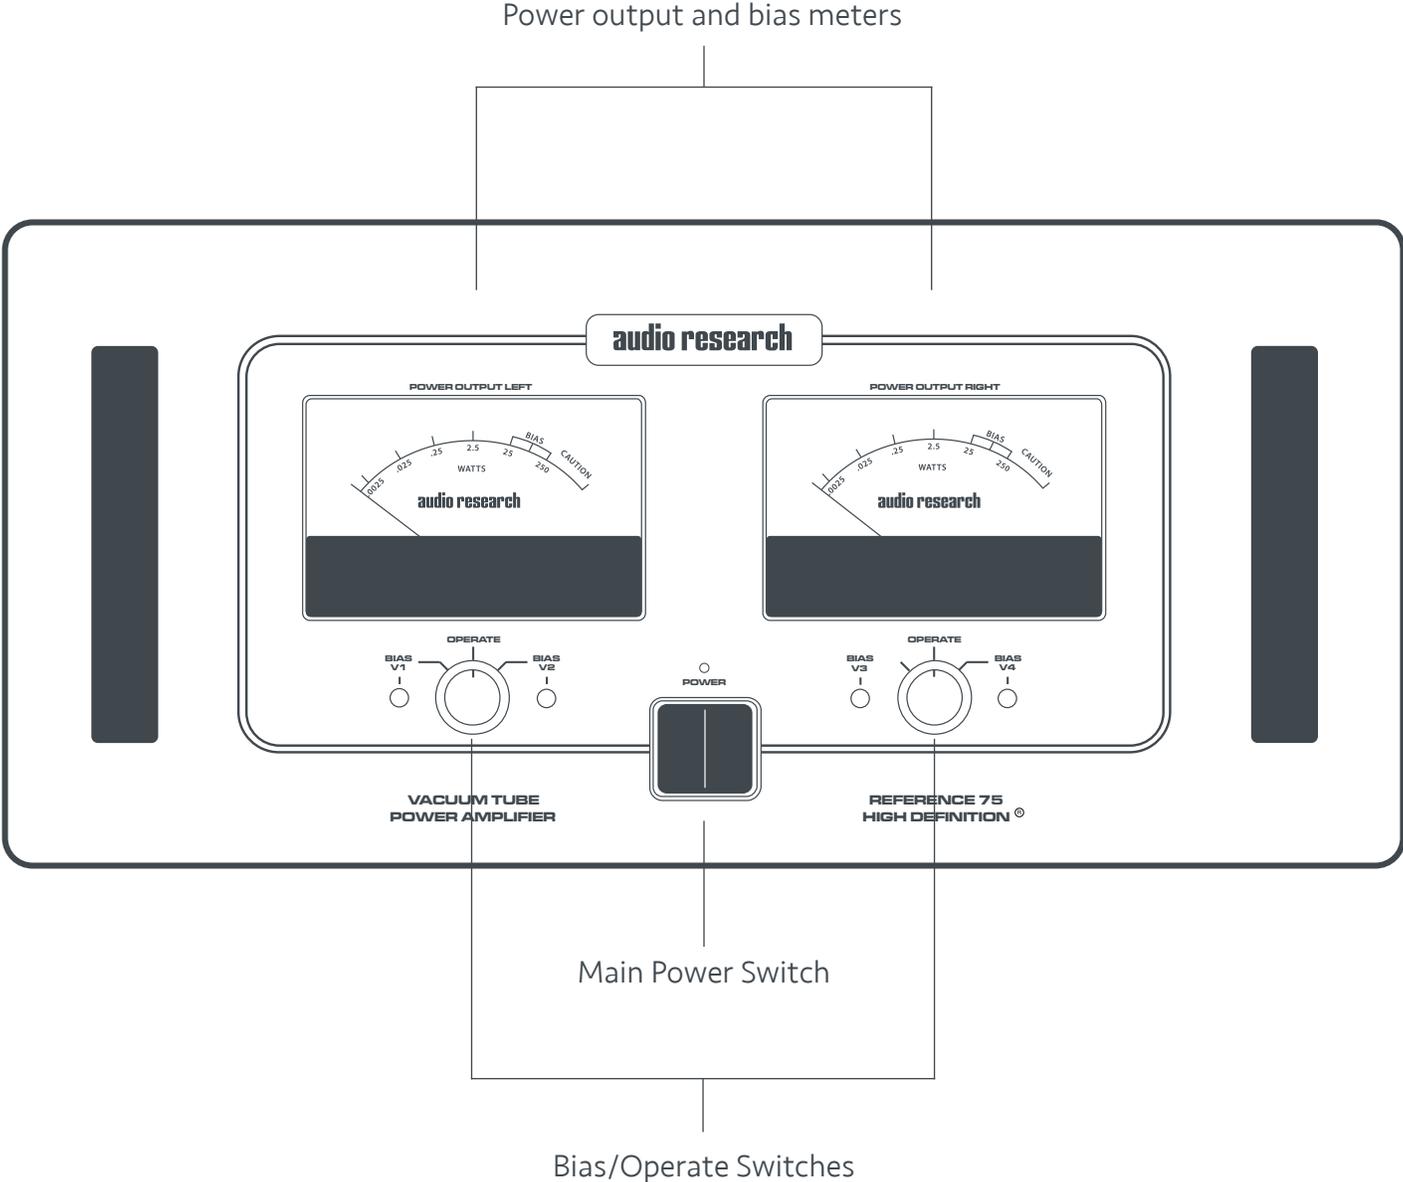

Operation

Start-Up

- Secure interconnects between the amplifier and your preamplifier; attach speaker leads to the appropriate output terminals.
- Attach supplied power cord to rear IEC inlet of amplifier, and plug other end into grounded A.C. power receptacle.
- Turn on preamp and all other components; mute preamp output.
- Press Reference 75 SE front panel control switch. Green power LED will light.
- Unmute preamplifier output, initiate source component signal, and adjust gain as appropriate.

Shut-Down

- Mute preamplifier output.
- Switch Reference 75 SE front panel control switch to off.
- Turn off preamplifier and then the associated input source components.

Important!

After the Reference 75 SE is turned off, wait at least five minutes before turning it on again. This allows the large bank of storage capacitors to drain energy. Not allowing enough time for this process can result in blown fuses or other damage to your amplifier.

Break-in

All quality stereo equipment benefits from a break-in period; during this time, the various components, wiring and solder connections change as electrical signals pass through them. While your Reference 75 SE will sound fantastic out of the box, it will only improve with continued use.

Display Illumination

The front panel meter display is illuminated with ultra low-noise, low voltage LED lighting which has no impact on sound quality when turned on. The display illumination can be turned on or off. To change the brightness of the display, locate the switch on the back panel labeled 'Meter Lights'. Select the on or off position.

Operation

Output Tube Bias Adjustment

As shipped from the factory, the output 'bias' adjustments are set for a nominal 65mA per KT150 tube. Under these idle conditions the tubes are each dissipating approximately 27 watts of their 60 watt rating. This point of operation provides 'enriched' Class AB1, and will satisfy the most critical listener.

For best results, operate and adjust the Reference 75 at 117.5 VAC (230 VAC). Adjustment must be made under zero-signal conditions after at least 15-20 minutes of uninterrupted stabilization time.

With the amplifier warmed up and signal set to zero, switch the rotary knob to one of the 'V' settings. Insert only the supplied non-conductive bias adjustment tool into the appropriate bias adjustment holes. Slowly turn the bias adjustment potentiometer in each of the holes marked with the output tube 'V' number position only when the bias switch is set to that associated 'V' number position. The meter should be set to read in the center of the tube bias arc (@65mA) for each of the four output tubes V1 - V4 for optimum sonic performance.

Maintenance

Vacuum Tubes

It is recommended that you replace the vacuum tubes of your Reference 75 SE in sets. All of the tubes in your amplifier have been matched to have similar operating characteristics, to provide the best sound quality and reliability. In the event you need to replace a single output tube, please refer to the numbers written on the silver base at the bottom of the vacuum tube when ordering a new tube.

Servicing

Because of its careful design and exacting standards of manufacture, your Reference 75 SE amplifier should normally require only minimal service to maintain its high level of performance.

Cleaning

To maintain the new appearance of this amplifier, occasionally wipe the front panel and top cover with a soft, damp (not wet) cloth to remove dust. A mild, non-alkaline soap solution may be used to remove fingerprints or similar smudges. Cleaners containing abrasives should not be used as they will damage the anodized finish of the front panel. A small, soft paintbrush is effective in removing dust from bevels, the recessed nameplate and other features of the front panel.

Caution

Your Reference 75 SE amplifier contains sufficient levels of voltage and current to be lethal. Do not tamper with a component or part inside the unit. Even with the power turned off, a charge remains in the energy storage capacitors for some time. Refer any needed service to your authorized Audio Research dealer or other qualified technician. Additional questions regarding the operation, maintenance or servicing of your amplifier, please contact the Customer Support Department of Audio Research Corporation at service@audioresearch.com or call 763-577-9700. You may also initiate a service request by visiting the Audio Research website

(www.audioresearch.com) and selecting 'Service Repair' at the top right of the home page.

Maintenance



Disposal and Recycling Guidelines

To dispose of this electronic product, do not place in landfill. In accordance with the European Union Waste Electrical and Electronic Equipment (WEEE) directive effective August 2005, this product may contain regulated materials which upon disposal require special reuse and recycling processing.

Please contact your dealer or importing distributor for instructions on proper disposal of this product in your country. Or, contact Audio Research Corporation (763.577.9700) for the name of your importing distributor and how to contact them. Packing and shipping materials may be disposed of in a normal manner.

Fuse

The Reference 75 SE has a single mains fuse on the back panel, adjacent to the mains power input. When replacing the fuse, use the exact value indicated. Please refer to the below information for fuse values. Audio Research is not responsible for damage caused by improper fuse values or aftermarket fuses.

100-125 V units: Bussmann MDQ7 slo-blo

220-250 V units: T4A slo-blo

When changing an internal fuse (or any time the cover of the unit is removed), make certain the main power is disconnected from the A.C. line. Be very careful working around circuit boards as there are dangerous voltages internally. If you are not comfortable opening your amplifier, please refer to a qualified service technician.

Warranty

Audio Research Corporation products are covered by a 3-Year Limited Warranty or a 90-Day Limited Warranty (vacuum tubes). This Limited Warranty initiates from the date of purchase, and is limited to the original purchaser, or in the case of demonstration equipment, limited to the balance of warranty remaining after original shipment to the retailer or importer.

In the United States, the specific terms, conditions and remedies for fulfillment of this Limited Warranty are listed on the warranty card accompanying the product in its shipping carton. The warranty terms are also available on the internet at www.audioresearch.com/en-us/company/warranty-statement. Outside the United States, the authorized importing retailer or distributor has accepted the responsibility for warranty of Audio Research products sold by them.

The specific terms and remedies for fulfillment of the Limited Warranty may vary from country to country. Warranty service should normally be obtained from the importing retailer or distributor from whom the product was purchased.

In the unlikely event that technical service beyond the ability of the importer is required, Audio Research will fulfill the terms and conditions of the Limited Warranty. Such product must be returned at the purchaser's expense to the Audio Research factory, along with a photocopy of the dated purchase receipt for the product, a written description of the problem(s) encountered, and any information necessary for return shipment. The cost of return shipment is the responsibility of the purchaser.

Specifications

Power Output: 75 watts per channel continuous from 20Hz to 20kHz. 1kHz total harmonic distortion typically 0.6% at 75 watts, below 0.05% at 1 watt.

Approximate actual power available at 'clipping' 76 watts (1kHz). (Note that actual power output is dependent upon both line voltage and 'condition' i. e.: if power line has high distortion, maximum power will be affected adversely, although from a listening standpoint this is not very critical)

Power Bandwidth: (-3dB points)
7Hz to 60kHz

Frequency Response: (-3dB points at 1 watt) 0.7Hz to 75 kHz

Input Sensitivity: 1.4V RMS BAL for rated output. (25 dB Bal gain into 8 ohms)

Input Impedance: 300K ohms Balanced

Output Polarity: Non-inverting. Balanced input pin 2+ (IEC-268)

Output Taps: 8 ohms, 4 ohms

Output Regulation: Approximately 1.0dB 8 ohm load to open circuit (Damping factor approximately 8)

Overall Negative Feedback: 15dB

Slew Rate: 10 volts/microsecond

Rise Time: 4.0 microseconds

Hum & Noise: Less than 0.06mV RMS - 112dB below rated output (IHF weighted, input shorted)

Power Supply Energy Storage: Approximately 520 joules

Power Requirements: 105-125VAC 60Hz (210-250VAC 50Hz) 410 watts at rated output, 500 watts maximum, 230 watts idle

Tubes Required: 2 - Matched pair KT150 - Power Output, 2 - 6H30 Driver

Dimensions:
Width 19" (48.3 cm)
Height 8.75" (22.2 cm)
Depth 19.5" (49.5 cm)

Handles extend 1.5" (3.8 cm) forward

Weight: 47 lbs. (21.3 kg) Net; 63 lbs. (28.6 kg) Shipping



audio research
HIGH DEFINITION®

3900 Annapolis Lane North
Plymouth, MN 55447
www.audioresearch.com

Specifications subject to change without notice.
©2015 Audio Research Corporation. Reproduction of this document in part or whole is expressly forbidden without written consent from Audio Research Corporation.